
## Aluminum Tube Fabric A-Frame Instructions






1. Connect with bungee one by one

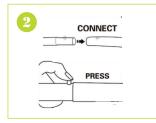


2. Connect with push-button




3. Insert the middile pole

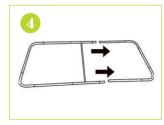


4. Finish the frame like this

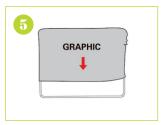

5. Install the pillowcase graphic



6. Connect the bottom of two frame like this



7. Connect the top of two frame like this



8. Finished